


Hydrostatic Pump Repair

www.hydrostaticpumprepair.net

Phone: 800-361-0028

Email: sales@hydrostatic-transmission.com

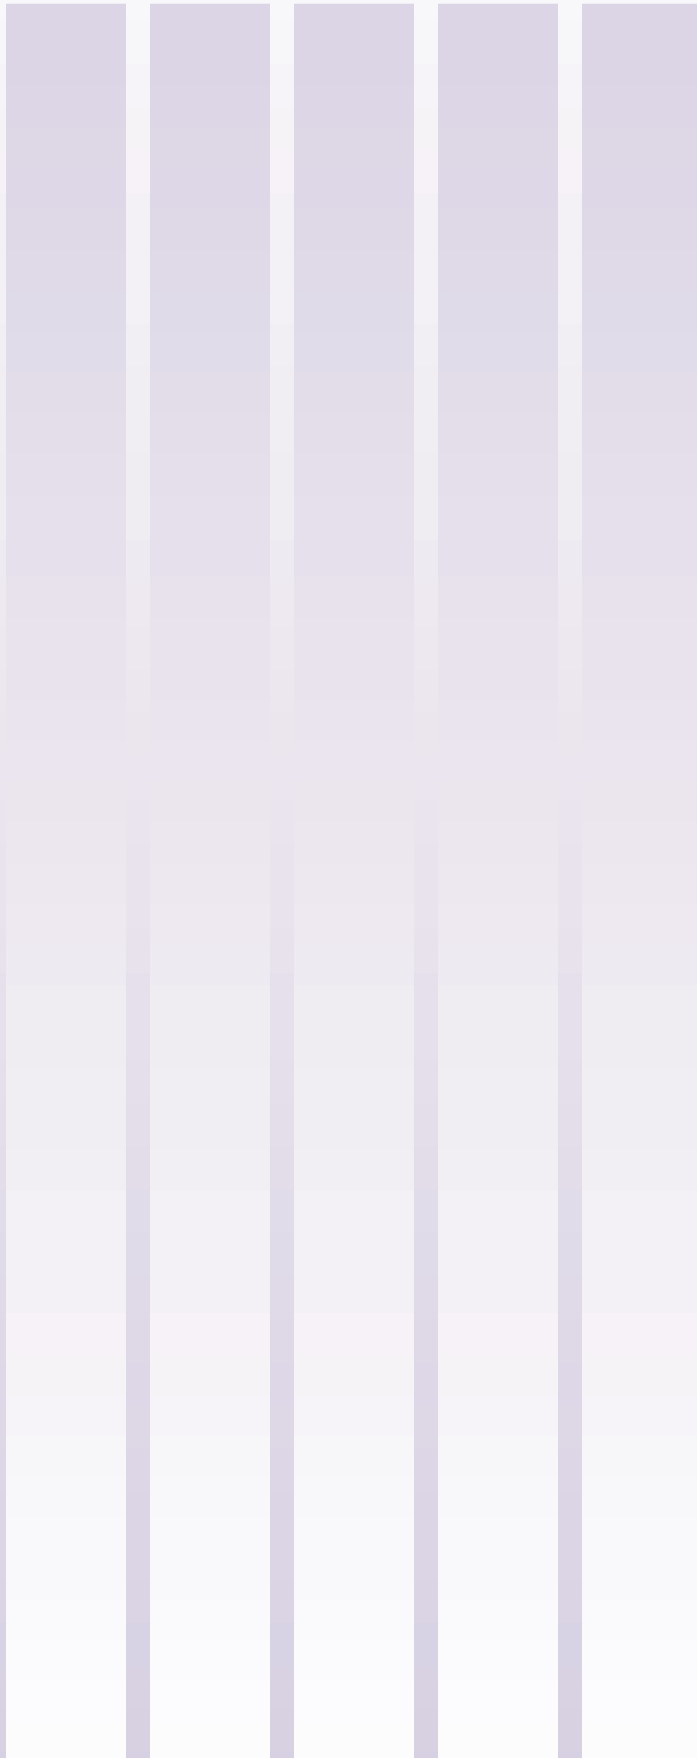

MODEL CODES

EDITION III

Linde Hydraulics Corporation

5089 West Western Reserve Road

Canfield, Ohio 44406

Telephone: (330) 533-6801

Fax: (330) 533-2091

Model Codes for H-Series-02 Closed Loop Pumps

MODEL	1 DISPLACEMENT (cc/rev)	2 ROTATION	3 CONTROL	4 CONTROL OPTIONS	5 MOUNTING	6 SHAFT	7 R/V SETTING	8 DISP. MAX.	9 DISP. MIN.	10 ADD-ONS	11 SPECIALS
HPV	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>
EXAMPLE:	105	R	K	1	C	H	420	X	X	AX	X

1 DISPLACEMENT

75 (4.63 cir)
105 (6.41 cir)
135 (8.27 cir)

2 ROTATION

R = CLOCKWISE
L = COUNTER-CLOCKWISE

3 CONTROL

H = HYDRAULIC REMOTE
E = PROPORTIONAL ELECTRIC
K = MANUAL CAM LEVER

4 CONTROL OPTIONS

HPV 'K' 1 = KORIF 1.0
 2 = KORIF 0.7
 3 = KORIF 0.8
 4 = KORIF 1.2
 5 = KORIF 1.5

E CONTROL 1 = 12 VDC
 2 = 24 VDC

5 MOUNTING

C = SAE C 2 BOLT MTG (75, 105)
D = SAE D 2 BOLT MTG (135)

6 SHAFT

H = ANSI 21T 16/32 P (75)
 23T 16/32 P (105)
 27T 16/32 P (135)

C = SAE C 14T 12/24 P
 (OPT 75, 105)

D = SAE D 13T 8/16 P (OPT 135)

11 SPECIALS

INSERT S, THEN CALL OUT REQUIREMENT IN CLEAR TEXT.

10 ADD-ONS

PTO'S:
A = SAE A w/9T SPLINE COUPLING (std. on all Models)
B = SAE B w/13T SPLINE COUPLING (2)
J = SAE B w/15T SPLINE COUPLING (2)
C = SAE C w/14T SPLINE COUPLING (2)

ADDITIONAL CONTROLS OPTIONS:
P = PRESSURE OVERRIDE
X = NONE
Z = ZERO FLOW DEVICE (1)

9 MIN. DISPLACEMENT (SINGLE UNITS ONLY)

ENTER "X", FOR ZERO MIN. DISPLACEMENT. OTHERWISE, SPECIFY SETTING IN CC/REV.

8 MAX. DISPLACEMENT (SINGLE UNITS ONLY)

IF NOT DESTROKED, ENTER "X". OTHERWISE, SPCIFY SETTING IN CC/REV.

7 RELIEF SETTING

IN BAR

NOTES: (1) Only available with "E" Control Option.
(2) PTO Option removal of Integral Boost Pump and necessities provision for external supply.